



EVOLUTION



FIRMWARE UPGRADE

Internet connection is required to download DitoGear™ Evolution firmware builds from DitoGear™ Server.

1. Download, unpack and run DitoGear Updater


Windows: http://deploy.ditogear.com/Evolution/WINDOWS/DitoGearUpdater_Windows%20.zip

MAC: http://deploy.ditogear.com/Evolution/MAC/DitoGearUpdater_MAC.zip

2. Connect DitoGear™ Evolution to a MAC or PC computer via USB cable

3. Select update mode and choose firmware version

Select "auto" to upgrade to the latest firmware available at our servers. Optionally, you can choose previous firmware versions from the drop-down list. Please note that force-loading deprecated firmware versions may cause compatibility issues with the latest build of DitoGear™ Evolution Software for Android or iOS.

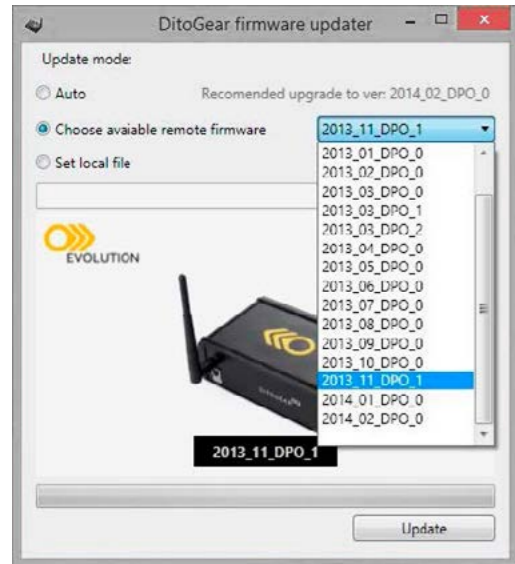

On the image you can see the actual firmware version.




4. Press Update button.

The app will automatically download chosen firmware and install it on the Evolution Interface.

5. Finish

The installation process finishes after progress bar is completed.

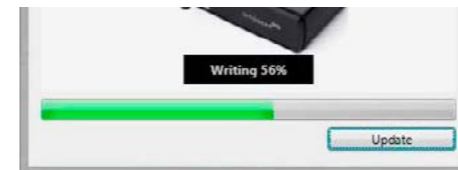



WWW.DITOGEAR.COM