

Welcome

Thank you very much for purchasing DitoGear™ motion control equipment. We hope that the devices will meet your expectations bringing a great value to your productions.

We really strive for delivering the best unboxing and equipment usage experience. If we (or someone else) failed at some point, just let us know and we'll do our best to fix it promptly.



Here's where to get started.
» ditogear.com/welcome

More resources

Latest user manuals are available at
» ditogear.com/user-manuals

For advanced connection diagrams check
» ditogear.com/charts

In case you need further assistance contact us at
» ditogear.com/support

Standard configuration

1. Signal cable

Connect an RJ45 type signal cable to the LensDrive and to the Output channel of a DitoGear™ Breakout Box.

A recommended cable length is 1m.

2. Controllers

Connect an RJ45 type signal cable to the OmniController or SmoothWheel or other controller of your choice. Connect the other end to Input 1 port of the Breakout Box.

3. Shutter release cable

Connect a shutter release cable to Sync 1 port (2.5mm micro jack) of the Breakout Box. Connect the other end to your camera.

This step is optional.

4. Power

Connect the power source - a DitoGear™ Power Pack 7Ah/14Ah, a DitoGear™ AC/DC power adapter or a 3rd party compatible power source to a Power port of the Breakout Box.

